

- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montage-aanwijzing
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning
- tr** Montaj talimatları

## QFM21.../MO

## QFM31.../MO

### A

### B

mm

### C

**For US and Asia Pacific only:**

<b>G</b>	AC 24 V ±20 % / DC 13.5...35 V
<b>G0</b>	GND
<b>+</b>	RS485 Modbus A
<b>-</b>	RS485 Modbus B
<b>Ref</b>	GND_ISO

Bus termination resistor  
120 Ω (jumper)

### Open Source Software (OSS)

All open source software components used within the product (including their copyright holders and the license conditions) can be found from the website <http://www.siemens.com/download?A6V11698658>.

Issued by  
Siemens Switzerland Ltd  
Smart Infrastructure  
Global Headquarters  
Theilerstrasse 1a  
CH-6300 Zug  
Tel. +41 58 724 2424  
[www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies)

© Siemens Switzerland Ltd, 2019  
Technical specifications and availability subject to change without notice.