



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-handleiding
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning
pl Instrukcja montażu
cz Montážní návod
hu Szerelési útmutató
el Οδηγίες εγκατάστασης
zh 安裝指導

Ventileinsatz
Valve insert
Garniture de vanne
Ventilinsats
Aspakkingset
Inserto per valvola
Venttiilin sisäkappale
Insertar en la válvula
Ventilindsats
Wkładka regulacyjna
Vložka
Szelepbetét
Μηχανισμός διακόπτη
阀芯插件

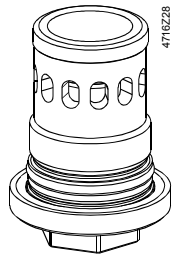


ASR...N

1

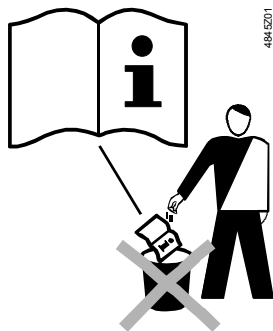

2

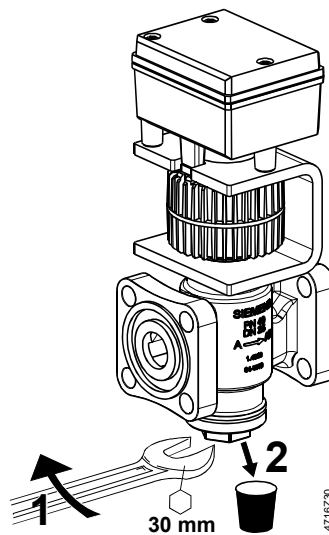


3




MVF...N	ASR...N
MVF661.25-0.16N	ASR0.16N
MVF661.25-0.4N	ASR0.4N
MVF661.25-1.0N	ASR1.0N
MVF661.25-2.5N	ASR2.5N
MVF661.25-6.3N	ASR6.3N


4

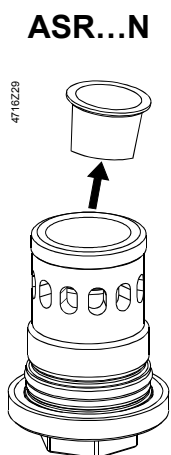


5

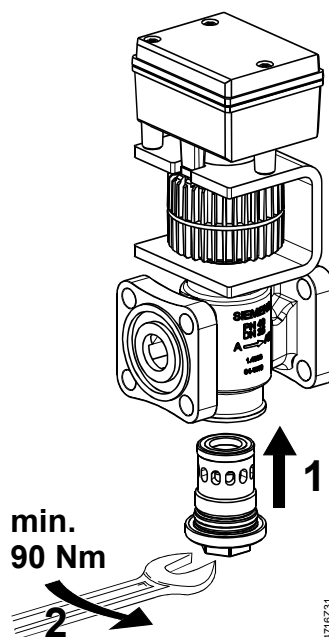

6

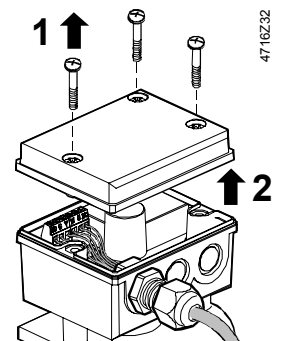

7

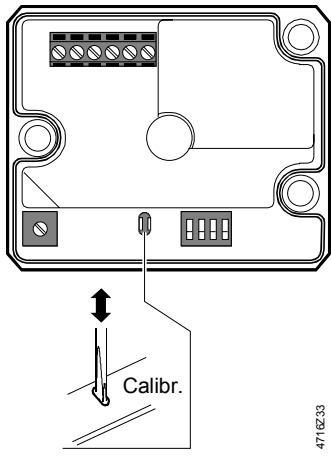

8

